



# SEAN PRODUCT INFORMATION

Please also note our general details and sales information

Edition 22.08.2024

Errors and amendments excepted. Our General Terms and Conditions are effective. / WEEE-Reg.-No. D 69718127

COMFORT	SEAT ADJUSTMENT		HEAD PICE ADJUSTMENT	COMFORT FUNKTIONS	
<ul> <li>standard equipment</li> <li>extra equipment</li> <li>extra equipment motor-driven adjustment only with mains operation</li> </ul>	motor-driven: back and leg part separate	with rechargeable battery without mains cable	manual	LIFT-up stand up assistance	massage
V2 in SIMIL VS2 VM2 VL2	•		•		
V4 in STMTL VS4 VM4 VL4	•		•	•	

#### **DESIGN**

#### **CONSTRUCTIVE DESIGN**

All the materials used correspond to the requirements according to RAL-GZ 430/4.

Functional armrchair, metal base frame

Seat upholstery structure: zig-zag springs, Dacron, cold foam VW 35, Diolen



CASUAL

Back upholstery structure with bay quilting: zig-zag springs, Dacron, polystyrene foam, 90% foam sticks, 10% silic. hollow fiber, Diolen

### **UPHOLSTERY CASUAL / LOOSE**

With casual upholsteries you are rather sitting "in the sofa" than on it, the upholstery snuggles. A casual/loose upholstery is characterized by a smooth upholstery structure. The cover is not waveless. The ridge of the covers on the seat, back and armrests as well as sitzmarks due to the model and design are typical.

### Bay quilting:

This high quality upholstery with bay quilting contains a flexible mixture out of loose filling material as foam sticks and/or plumes that enables a point adaptation to the body. For this the fillings are worked in separate bays that according to the cover come more or less apparent. Sitzmarks are due to model and design typical.

#### **BACK TENSIONING SECTIONS**


All back tensioning sections are supplied as standard with the original cover.

#### INDICATIONS OF DIMENSIONS AND REQUIREMENTS

All the values given are approximate values: dimensions in centimetres, material requirements in metres, leather requirements in square metres.

#### **ERGONOMICS**

In each version the armchair is available in the 3 sizes S, M, L. All relevant comfort sizes (seat height, seat depth, length of the leg flap, back height) are expanding in due proportion, adapted to all body measurements.

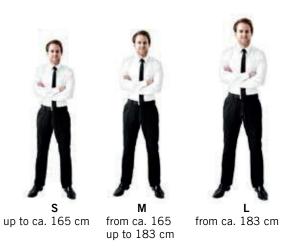

Constructive structure and elected materials ensure that the standards of the quality assessments and test instructions of RAL-GZ 430 are not only achieved but exceeded. Our products are designed for a max. static loading of 125 kg per seat.



## KOINOR



# SEAN PRODUCT INFORMATION

Please also note our general details and sales information

Edition 22.08.2024

Errors and amendments excepted. Our General Terms and Conditions are effective

#### **FUNCTIONS**

#### I FUNCTIONAL HEAD PIECE

The head piece can be adjusted by a mechanism from each position forward (catching) and by light back-pressure backward.

#### **II RELAX FUNCTION**

Integrated seat adjustment: Back and leg part can be adjusted separate of each other for a comfortable relax position into a lying position.

## MOTOR-DRIVEN RELAX FUNCTION VS2, VM2, VL2

By operation of the sidewise fixed control panel (standing in front on the left) the back and the leg part can be adjusted infinitely separate of each other into a lying position.



The motor-driven relax function is actuated by mains current. It can also be delivered **with rechargeable battery** against extra charge.

## MOTOR-DRIVEN RELAX FUNCTION WITH LIFT-UP FUNCTION VS4, VM4, VL4

In addition to the motor-driven adjustment with this version a useful stand up assistance (LIFT-up function) is integrated. Instead of the control panel a cable hand switch is delivered with which all functions can be operated.



The armchair is not rotatable in the moved out LIFT-up position. Only by mains current (**rechargeable battery** is **not** possible).

Please note: Do not sit on the raised leg part. The joint is not designed for use with the entire weight of the body.



#### **III COMFORT PACKAGE MASSAGE**

Optional a comfort package consisting of massage program and a lordosis support can be integrated against extra charge (see price sheet).

It can be chosen between an undulating massage program and a lordosis support via separate control panel (standing in front on the right). During the massage process the lordosis function can not be activated.



The massage process takes 10 minutes. The following reset time is ending after approx. 5 minutes. Then the program can be switched on again.

Only for armchairs with mains current (**rechargeable battery** is **not** possible).

#### **LEGS**

 No. 1. Metal rotary plate stainless steel, lightly curved



 No. 2. Metal rotary plate stainless steel with upholstered core (partially covered), lightly curved against extra charge see price list



 No. 3. Wooden rotary plate beech natural and in stain colours walnut, wenge and black, lightly curved



 No. 4. Stellate leg optional metal nickel satined (stainless steel optics) or metal powder-coated structural black mat



No. 5. Stellate leg aluminium shiny (polished)



All tethered relax versions (with mains current) are possessing a turn limiter. These avoid that the electric cable wraps around the frame. Rotatability of these armchairs is approx. 320°. Relax versions actuated by rechargeable battery are rotatable by total 360°.



# SEAN PRODUCT INFORMATION

Please also note our general details and sales information

Edition 22.08.2024

Errors and amendments excepted. Our General Terms and Conditions are effe

#### **NECK CUSHION**

Neck cushion with counter weight optional available in 2 sizes / shapes:

YN 42 x 32 cm



YN1 43 x 25 cm



#### **CONTRAST STITCHING**

With leather covers the colour of thread must be chosen as well for the standard seam processing as for the chain stitch.

With fabric and microfiber covers the colour of the thread must only be chosen at the time when the chain stitch is desired.

The processing is carried either with contrast stitching or with a thread matching the leather in terms of colour (tone on tone).

With processing with contrast stitching the **desired colour of the contrast thread** must be explicitly chosen.



#### **SEAM**

Depending on the model the seam on fabric covers may be different from leather covers, for example due to a different divide of the tensioning sections. Decorative leather seams (e.g. fell or double seams) may be omitted depending on the model or according to suitability of the fabric covering materials.

The seam construction diagram and the thread size are defined due to the model. Alternative to the standard seam processing a decorative stitch (chain stitch) can be chosen.



#### **COVERING MATERIALS**

This armchair is available in leather and fabric.

You may find the information concerning the specific properties of the covering materials on the sample labels.







# SEAN PRODUCT INFORMATION

Please also note our general details and sales information


Edition 22.08.2024

Errors and amendments excepted. Our General Terms and Conditions are effective

#### **SECTIONAL DIMENSIONS**

#### Height

S min. 82 / max. 108 M min. 90 / max. 116 L min. 98 / max. 124

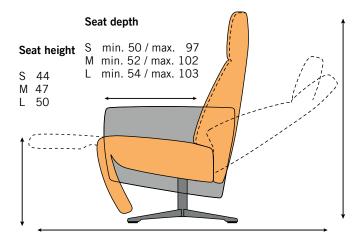

### Depth

S min. 83 / max. 162 M min. 85 / max. 171 L min. 87 / max. 180


## **ORDER CHECK LIST**

Please pay attention to the following issues respectively to complete specifications when ordering:

- article / extra charges
- covering material
- seam: standard seam (according to the material fell seam or closed seam) or chain stitch
- with leather respectively fabric covers production with or without contrast stitching (with fabric covers the fell seam is not possible with contrast thread)
- with finish with contrast stitching colour of contrast thread
- leg version; with wooden rotary plate also stain colour, with stellate leg (no. 4) also finish



SILENCIO COMFORT Leg part and back adjustable for a comfortable relax position. Adjustment optional motor-driven or motor-driven with LIFT-up stand up assistance. The comfort package massage / lordosis support can be integrated optionally.

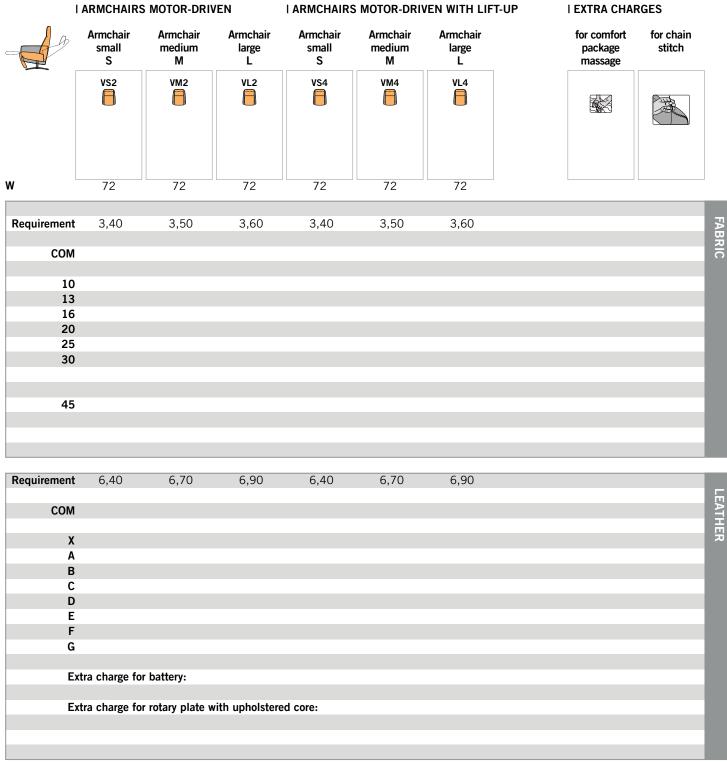

# KOINOR



Errors and amendments excepted. Our General Terms and Conditions are effective.

### **I ACCESSORIES**

Neck cushion
w. counter
weight

YN

The state of the stat

W

<u>ا</u>	Requirement	0,70	0,50			
LADRIC						
3	COM					
	10					
	13					
	16					
	20					
	25					
	30					
	45					

EATHE

	Requirement	0,90	0,70			
	СОМ					
1						
	Х					
	Α					
	В					
	С					
	D					
	E					
	F					
	G					